

# User manual

document version 1.0 for FW from 1.0

## DALIrsw



Universal DALI rotary switch

Infinite rotation and press

Control groups, addresses or broadcast

Powered from the DALI bus

Led indicator

Optional backlight


Installation in the KU68 box

Compatible with ABB cover lines  
Tango, Future Linear, Swing, Element,  
Levit, Neo (covers are not included)

DALrsw is a universal rotary knob for the DALI bus. The function is adjustable by the DALIconfig program, which is free to download on the website [www.foxtron.eu](http://www.foxtron.eu)

Technical specification		
Bus	DALI / DALI2	
Power consumption (from DALI)	4	mA
Wires cross section	0,5	mm <sup>2</sup>
Ingress protection	IP20	
Ambient working temperature	0 ÷ 50	°C
Storing temperature	-10 ÷ 70	°C
Weight	50	g

Signaling	
data	The flashing LED indicates that messages are being sent or received on the bus

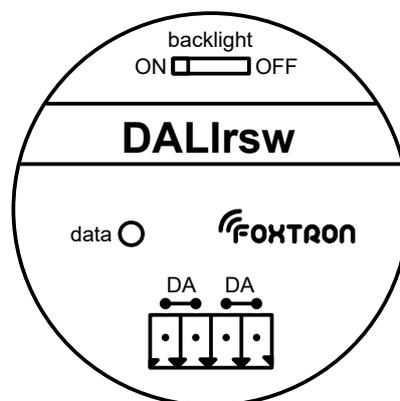

Clamp connection	
<i>designation</i>	<i>description</i>
DA/DA	sběrnice DALI, dva vodiče vzájemně záměnné

### Backlight

The backlight switch allows you to optionally turn on the soft backlight of the DALrsw fingerboard to make the button easier to find at night.

## Function

The DALI<sub>rsw</sub> rotary knob is user-programmable. The settings are made by the DALI<sub>config</sub> program, which is available for free download at [www.foxtron.eu](http://www.foxtron.eu) via the DALI232, DALI<sub>net</sub> or DALI2<sub>net</sub> converter.

## Extended functions - DALI2+

The DALI<sub>rsw</sub> rotary switch can directly control the lights on the DALI bus. Depending on the settings, the control can be broadcast, group or directly to one address. One of two modes **Last value** or **Preset value** with slightly different functionality can be set for control.

### Press of the pushbutton

When the lights are on, it switches them off.

When the lights are off, it turns them on.

<i>Mode</i>	<i>Light level to which it is switched on</i>
Last value	The lights are turned on to last level before switching them off.
Preset value	The lights are turned on to the value that was stored with a long press

### Long press

In **Preset value** mode, if the lights are not currently off, the current light level value will be stored and a short press will illuminate to this preset value.

In **Last value mode** or if the lights are currently off, it will light up to the maximum value.

A long press on the button is considered when holding the button for more than 2 seconds.

### Rotating the switch

Rotating to the right adds brightness to the lights. When the lights are off, they turn on. Rotating to the left reduces the brightness of the lights to the minimum brightness. A short press is required to switch them off.

## Settings

<i>parameter</i>	<i>description</i>	<i>Factory setting</i>
Enable operation	Enables or disables lighting control	Enable
Controlled address	Address of controlled lights <ul style="list-style-type: none"> <li>• Bcast – all light on the bus</li> <li>• Group – group of lights</li> <li>• Address – single light</li> </ul>	Bcast
Control mode	Light control mode selection <ul style="list-style-type: none"> <li>• Last level – illumination to the last set value</li> <li>• Preset level – illumination to preset level</li> </ul>	Last level
Preset DAP level	Preset light level to which it is turned on by a short press.	254
Min level	For proper operation, it is necessary to set the value of the minimum lighting level, which is set in the ballast.	85
Max level	For proper operation, it is necessary to set the value of the maximum lighting level, which is set in the headlights.	254

Dimensions [in mm]

