

User manual

version 1.2

SERInet



converter RS485 / Ethernet

power supply passive PoE or 5-32V

communication indication on the serial line

galvanic separation RS485 / ETH

installation on the DIN rail (2 modules)


Terminals RJ15 for RS485



SERInet is a converter from RS485 to Ethernet (TCP/IP). Converter is possible to be supplied passive PoE thanks to the Ethernet data cable or by power supply on the terminals.


Technical specification		
bus	RS485, Ethernet	
speed (ETH)	10/100M	
protocol (ETH)	TCP/IP	
supply voltage	5-32 (9-32 passive PoE)	V
	1,5	W
consumption	50-240 (supply 32-5V)	mA
consumption (RS485)	5	mA
wires cross section	0,08 – 1,5	mm²
ingress protection degree	IP20	
galvanic separation RS485 / ETH	4	kV
ambient working temperature	-25 ÷ 60	°C
storage temperature	-25 ÷ 60	°C
weight	80	g

Consumption depending on voltage supply

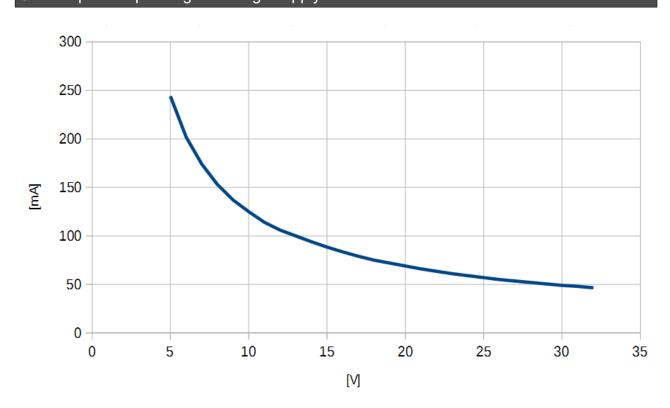



Signalization		
ETH	Connection to the Ethernet network	
	Ethernet speed	
100M	it is off	10Mbit
	it is on	100Mbit
	Sending of the data on RS485	
Тх	blinking signalizes outgoing data on the serial line	
	incoming communication on RS485 bus	
Rx	blinking signalizes incoming data to	

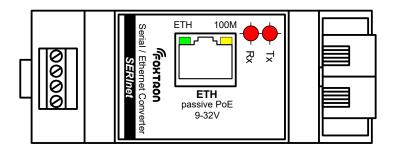

Power supply

This unit has two power supply options, passive PoE or external supply on the terminals IN 5-32VDC. Consumption in both cases is 1,5W (supply current is in both cases dependent on the connected voltage).

Passive PoE	Power supply is distributed together with the Ethernet to the ETH connector. Power supply is inserted in the data cable using the common passive PoE injector. Supply voltage can be in range 9-32V.
IN 5-32VDC	DC power supply 5-32V to the terminal "IN 5-32VDC"

Serial line is galvanically separated from Ethernet network and has its power supply on the Dbus. Supply voltage can be in range 9-32V.


Protocol

Data are sent to the Ethernet network through the TCP/IP protocol.




Terminals connection

SERInet in variant "SERInet RJ" has on the side two equal connectors RJ15 (another variant is "SERInet ST" with six pin screw terminals).

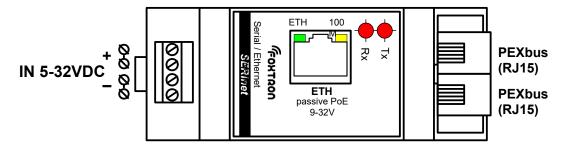

designation	description
ETH	Ethernet, passive PoE power supply
PEXbus	connector PowerExpress bus (type RJ15)
IN 5-32VDC	external DC 5-32V (alternative to PoE)

wires preparation:



Setup

Setup of the SERInet converter is done by web browser. To the address line input the IP address of the converter. In the factory settings the address is


192.168.1.241

If the address is unknown the converter can be found using DALIconfig program which is downloadable for free on the www.foxtron.eu

Default Ethernet settings in show in the following picture.



Settings (Network)

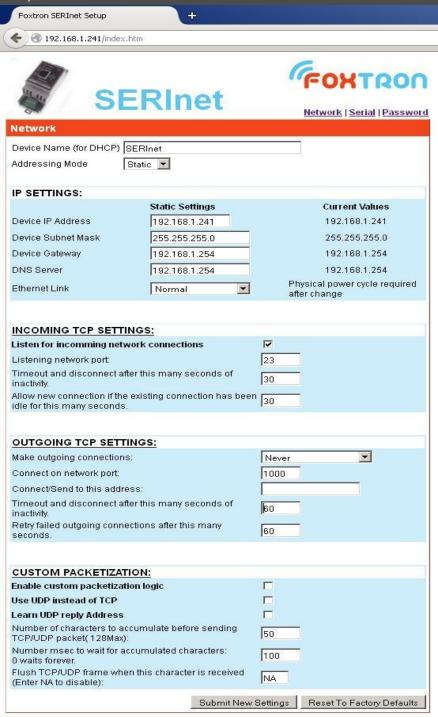



Addressing Mode Static -manual setup of the IP address	General TCP settings	
Addressing Mode DHCP – automatic setup of the IP address using DHCP Device IP Address IP address of DALInet converter (for Addressing Mode = Static) Device Subnet Mask Device Gateway Default gateway DNS Server Domain server address Normal – automatic speed choice Ethernet Link 100BT Half duplex – Ethernet speed 100Mbps 10BT Half duplex – Ethernet speed 10Mbps TCP setup for incoming connection Listen for incoming network connections Listening network port Timeout and disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TCP setup for outgoing connection Make outgoing connections Make outgoing connections Make outgoing connections Connect on network port Connect on network port Connect on network port Connect on network port Timeout and disconnect after this many seconds Per SeRInet converter does not create connections On power-up – SERInet converter creates connection if it receives data on the serial line port number on which the SERInet creates the connection if the serial data received – SERInet creates connection if it receives data on the serial line Port number on which the SERInet creates the connection it created. Setting the parameter to 0 is this function which the SERInet creates the connection if created. Setting the parameter to 0 is this function in created. Setting the parameter to 0 is this function which the SERInet creates the connection it created. Setting the parameter to 0 is this function switched off.	Device Name (for DHCP)	SERInet name for DHCP server
DHCP Device IP Address IP address of DALInet converter (for Addressing Mode = Static) Device Subnet Mask Device Gateway Default gateway DNS Server Domain server address Normal – automatic speed choice Ethernet Link 100BT Half duplex – Ethernet speed 100Mbps 10BT Half duplex – Ethernet speed 10Mbps 10BT Half duplex – Ethernet speed 10Mbps TCP setup for incoming connection Listen for incoming network connections Listening network port Immediated a disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TTCP setup for outgoing connection Make outgoing connections Make outgoing connections Make outgoing connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line port number on which the SERInet creates the connection Connect/Send to this address Timeout and disconnect after this many seconds of inactivity The inactive time after which is allowed to start new connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line port number on which the SERInet creates the connection Connect/Send to this address Timeout and disconnect after this many seconds of inactivity The inactive time after which the SERInet treates the connection it created. Setting the parameter to 0 is this function switched off.		Static –manual setup of the IP address
Device Subnet Mask Device Gateway DPS Server Domain server address Normal – automatic speed choice Ethernet Link Device Gateway DNS Server Domain server address Normal – automatic speed choice Ethernet Link DBT Half duplex – Ethernet speed 100Mbps 10BT Half duplex – Ethernet speed 10Mbps TCP setup for incoming connection Listen for incoming network connections Listening network port Listening network port Connection Timeout and disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TCP setup for outgoing connection Make outgoing connections Make outgoing connections Make outgoing connections Connect on network port Connect on network port Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity The inactive time after which the SERInet terminates the connection switched off. Never – SERInet converter to 0 is this function switched off. Never – SERInet converter does not create connections Never – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line port number on which the SERInet creates the connection Connect/Send to this address Timeout and disconnect after this many seconds of inactivity The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	Addressing Mode	
Device Gateway DNS Server Domain server address Normal – automatic speed choice 100BT Half duplex – Ethernet speed 100Mbps 10BT Half duplex – Ethernet speed 10Mbps 10BT Half duplex – Ethernet speed	Device IP Address	
DNS Server Domain server address	Device Subnet Mask	network mask
Ethernet Link Normal – automatic speed choice	Device Gateway	Default gateway
Ethernet Link 100BT Half duplex – Ethernet speed 100Mbps 10BT Half duplex – Ethernet speed 10Mbps 10BT Half duplex – Ether to head speed 10Mbps 10BT Half duplex – Ether speed 10Mbps 10BT Half duplex – Ether to he SERInet terminates connection 10 Half and 10	DNS Server	Domain server address
TCP setup for incoming connection Listen for incoming network connections Listening network port Timeout and disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TCP setup for outgoing connections Make outgoing connections Make outgoing connections Connect on network port Connect on network port Timeout and disconnect after this many seconds The inactive time after which the SERInet terminates the connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. TOP setup for outgoing connection Never – SERInet converter does not create connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity The inactive time after which the SERInet creates the connection The inactive time after which the SERInet creates the connection The inactive time after which the SERInet creates the connection The inactive time after which the SERInet terminates connection The inactive time after which the SERInet terminates connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.		Normal – automatic speed choice
Listen for incoming network connections Listen for incoming network connections Listening network port Listening network port Timeout and disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TCP setup for outgoing connection Make outgoing connections Make outgoing connections Connect on network port Connect on network port Listening network port Iturn on the possibility to connect to the SERInet converter mumber of port on which the SERInet waits on connection. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. Never – SERInet converter does not create connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	Ethernet Link	100BT Half duplex – Ethernet speed 100Mbps
Listen for incoming network connections Listening network port Timeout and disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TCP setup for outgoing connection Make outgoing connections Make outgoing connections Connect on network port Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Turn on the possibility to connect to the SERInet converter waits on connection The inactive time after which the SERInet terminates the connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. Never – SERInet converter does not create connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Connect/Send to this address Timeout and disconnect after this many seconds of inactivity The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.		10BT Half duplex – Ethernet speed 10Mbps
Connections Listening network port Imeout and disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TCP setup for outgoing connection Make outgoing connections Make outgoing connections Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Connect and disconnect after this many seconds of inactivity Connect and disconnect after this many seconds of inactivity Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Connections Converter Newer — SERInet converter does not create connections On power-up — SERInet converter creates connection after connecting power supply. If serial data received — SERInet converter creates connection Port number on which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	TCP setup for incoming connection	on
Connection Timeout and disconnect after this many seconds of inactivity Allow new connection if the existing connection has been idle for this many seconds TCP setup for outgoing connection Make outgoing connections Make outgoing connections Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Connection Connect/Send to this address The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. The inactive time after which the SERInet creates connection IP address on which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	Listen for incoming network connections	•
the connection. Setting the parameter to 0 is this function switched off. Allow new connection if the existing connection has been idle for this many seconds The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. The inactive time after which is allowed to start new connection. Setting the parameter to 0 is this function switched off. Never – SERInet converter does not create connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Port number on which the SERInet creates the connection IP address on which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	Listening network port	·
connection has been idle for this many seconds TCP setup for outgoing connection Make outgoing connections Make outgoing connections Make outgoing connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Connection is experimental to 0 is this function switched off.	Timeout and disconnect after this many seconds of inactivity	
Never – SERInet converter does not create connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Never – SERInet converter creates connection after converter creates connection on the serial line Port number on which the SERInet creates connection IP address on which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	Allow new connection if the existing connection has been idle for this many seconds	connection. Setting the parameter to 0 is this
Make outgoing connections On power-up – SERInet converter creates connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Connect on network port port number on which the SERInet creates connection Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Connections Connection SERInet converter creates connection the serial line Port number on which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	TCP setup for outgoing connection	n
connection after connecting power supply. If serial data received – SERInet converter creates connection if it receives data on the serial line Connect on network port Connect/Send to this address Timeout and disconnect after this many seconds of inactivity connection after connecting power supply. If serial data received – SERInet converter creates connection which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.		
Connect on network port port port number on which the SERInet creates connection Connect/Send to this address IP address on which the SERInet creates the connection Timeout and disconnect after this many seconds of inactivity Timeout and disconnect after this many seconds of inactivity Connection if it receives data on the serial line port number on which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	Make outgoing connections	, ,
Connection Connect/Send to this address Timeout and disconnect after this many seconds of inactivity Connection IP address on which the SERInet creates the connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.		
Connect/Send to this address connection Timeout and disconnect after this many seconds of inactivity connection The inactive time after which the SERInet terminates connection it created. Setting the parameter to 0 is this function switched off.	Connect on network port	
many seconds of inactivity connection it created. Setting the parameter to 0 is this function switched off.	Connect/Send to this address	
Retry failed outgoing connections The time after which the SERInet repeats the	Timeout and disconnect after this many seconds of inactivity	· ·
	Retry failed outgoing connections	The time after which the SERInet repeats the



after this many seconds	attempt to create connection
Dividing packets	
Enable custom packetization logic	packet dividing turn on
Use UDP instead of TCP	using UDP instead TCP
Number of characters to accumulate before sending TCP/UDP packet(128Max)	number of characters which will be send in one message (maximum 128) – data will be also send if the set time passed or the set character come
Number msec to wait for accumulated characters: 0 waits forever	the time after which the received characters are sent. 0 signs that the data will not be sent dependently on the time.
Flush TCP/UDP frame when this character is received (Enter NA to disable)	Decimal character value (ASCII) after which reception will be sent. If the "NA" is input no character is selected. For example CR (carriage return) is 13.

By pressing the button "Submit New Settings" the selected settings are saved.

Settings (Serial)



Data Port Settings	RS-485 Half Duplex – half duplex two wires RS485
--------------------	--



	RS-485 Full Duplex – full duplex four wires RS485
Data Baud Rate	Communication speed choice. Selection is possible from commonly used speeds. Choice "Custom" sets the speed defined by user.
Custom Baud Rate	Communication speed chosen by user. Used in the case that in "Data Baud Rate" is set "Custom"
Data Bits	number of data bits
	None – no parity used
Data Parity	Odd – used odd parity
	Even – used even parity
Stop Bits	number of stop bits

Settings (Password)



For change of password fill the User Name and twice new password. In the case that you do not want to use password leave the password fields blank. By pressing the button "Submit New Settings" you save new password.



Power Express (PEX)


In the case of using with Power Express system (PEX) it is suitable to insert the reduction on the RJ15 connector which is used for PEX bus by default.

Recommended setup "CUSTOM PACKETIZATION" for PEX bus.

Enable custom packetization logic	ᅜ
Use UDP instead of TCP	
Number of characters to accumulate before sending TCP/UDP packet(128Max):	128
Number msec to wait for accumulated characters: 0 waits forever.	0
Flush TCP/UDP frame when this character is received (Enter NA to disable):	3



Dimensions (in mm)

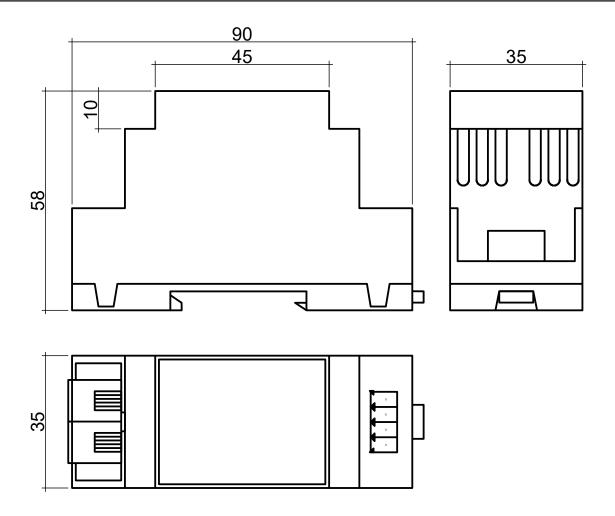



tel: +420 274 772 527 e-mail: info@foxtron.cz web: www.foxtron.eu